1

Attach antenna.



Apply power.



Plug in Ethernet cable.



Plug Ethernet cable into PC or router WAN port.







Quick Start Guide

Operation: Device assigns IP to downstream equipment via DHCP by default. Management console available from web browser at url: 192.168.1.1

Username and password should be left blank.

Mounting Options

Double sided tape or re-usable strap





