



Quick Start Guide

TWRPI-KEYPAD

12-key Capacitive Touch Keypad Plug-In



TOWER SYSTEM



Gei io know the TWRPI-KEYPAD

Features

- 12 discrete capacitive electrodes
- Electrodes are arranged in a 12-key numeric telephone-keypad layout
- Supported by the TSS library
- Compatible with Freescale Tower System modules that feature Tower Plug-In (TWRPI) sockets



*Tower System module (black development board in image) not included with TWRPI-KEYPAD plug-in



TWRPI-KEYPAD Freescale Tower System

The TWRPI-KEYPAD module is part of the Freescale Tower System portfolio, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Elevate your design to the next level by building your Tower System today.



Step-by-Step Installation Instructions

1 Install the TWRPI-KEYPAD

- Identify an open general purpose TWRPI socket on a TWRPI-compatible Tower System module.
- Identify the correct orientation of the TWRPI-KEYPAD. The TWRPI is keyed and uniquely sized to only fit in the appropriate TWRPI socket with the correct orientation.
- Carefully insert the TWRPI-KEYPAD into the general purpose TWRPI socket.

2 Verify Latest Software Installation

Check **freescale.com/tss** for touch library updates to make sure you have the latest software.

3 Follow the Respective Tower System Module Quick Start Guide

Follow the TSS library quick start guide to run the demo for the board being used.



TWRPI Connector Pinout



Support

Visit **freescale.com/support** for a list of phone numbers within your region.

Warranty

Visit freescale.com/warranty for complete warranty information.

For more information, visit freescale.com/Tower

Join the online Tower community at towergeeks.org

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Tower is a trademark of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © 2013 Freescale Semiconductor, Inc.

Document Number: TWRPIKEYPADQSG REV 1 Agile Number: 926-78798 Rev B

