FIBER SENSORS

LASER **SENSORS**

PHOTOELECTRIC

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS**

PARTICUI AR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Light Curtains Safety Components

Control Units Definition of Sensing Heights

SW-100

Optical Touch Switch

W-100 SERIES

Related Information ■ General terms and conditions...... F-7

■ General precautions P.1501





Conforming to OSHA / ANSI



Gentle start-up switches in accordance with ergonomics

Greater convenience with less stress on the hands. Inventive start-up switches in accordance with ergonomics.

SW-101

Sensing surface

Beam axes



Operate the switch simply by touching it

This is an optical-type switch (two beam axes) which allows you to start equipment simply by touching the sensing surface to interrupt the light beams.



Reduces load on hands and fingers

Provides a zero force, low impact, machine control solution.



Prevents medical issues

The switch reduces the possibility of medical problems that are associated with high impact push buttons, such as tendonitis or carpal tunnel syndrome.

Reduction in false operation from dropped objects

SW-101

The response time is set for a slight delay so that the switch will not respond a falling object, such as a dropped tool. The switch is designed so that it will operate when touched by hand, but false operation will rarely occur when something is dropped onto it.



A switch that pursues the prevention requirement for malfunctioning as required by ISO 13851 (JIS B 9712) two-hand control devices

SW-111



Safeguard prevents false operation

SW-111 saves the hassle of making an additional safeguard. In addition, with its ISO 13851 complying shape, even a knock on the elbow will not cause a false operation (light interruption).

No false operation by wrist



No false operation by elbow




No false operation by plastic sheet



Experimental cone (ISO 13851)

SW-111 does not produce false operation on the experimental cone specified by ISO 13851.



Intended startup is possible

SW-111

SW-111's detection does not operate when a hand is just placed onto the unit.

With a design that only detects when fingers are bent in and lightly grip onto the unit, an intended startup is possible.



Detection does not operate when a hand is only placed onto the unit.



Detection only operates when fingers are bent in and lightly grip onto the unit.




Application example

When used as two-hand control devices

Equipped with external input indicators

Two sets of external input indicators (two colors) are provided, so that they can be used as operation indicators for a variety of purposes.

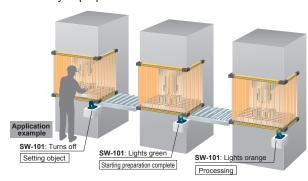

Prevents false operation caused by dirt

If the light is continuously interrupted for more than 10 sec. by dust, etc., the switch is disabled and the fault indicator (yellow) illuminates.

Uses a long-life Photo-MOS relay

Because a Photo-MOS relay is used for the output, a single unit can be configured without a specific output polarity. In addition, there is no need for periodic replacement of parts such as contact-type relays.

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS**

PARTICUI AR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING

Selection Guide

Light Curtains Safety Components

Optical Touch Switch Control Units

Definition of Sensing Heights

SW-100

FIBER SENSORS

PHOTO-ELECTRIC SENSORS MICRO

AREA SENSORS

CURTAINS/ SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition

SW-100

ORDER GUIDE

| De | esignation | Appearance | Model No. | Power supply | Output |
|----------------------|----------------|------------|-----------|--------------|--|
| Optical touch switch | | | SW-101 | 12 to 24V DC | |
| | With safeguard | | SW-111 | ±10 % | Semiconductor Photo-MOS relay output × 3 |

OPTIONS

| Designation | | Model No. | Description | |
|-------------|--|-----------|--|--|
| | Mounting tool | SW-MT1 | Tool for tightening mounting nuts with a commercially-available wrench. (Refer to p.701) | |
| | Sensing surface protective sheet for SW-101 | SW-PS1 | A transparent stick-on sheet that protects the sensing surface of SW-101 from dirt and scratches. 5 sheets per set | |

Sensing surface protective sheet for SW-101




SPECIFICATIONS


| Designation | | Doolaration | Optical touch switch | | | | |
|--------------------------|----------------------------|---------------|--|---|--|--|--|
| | | Designation | | With safeguard | | | |
| Iten | n \ | Model No. | SW-101 | SW-111 | | | |
| Sensing method | | | Thru-beam type photoelectric sensor (2 beam axes) | | | | |
| Applicable standards | | ards | CSA 22.2 No.14, CSA 22.2 No.0.8, ANSI / NFPA 79, UL 508, EN 60947-5-2 (EMC only) | | | | |
| Power supply | | | 12 to 24 V DC ±10 % Ripple P-P 10 % or less | | | | |
| Current consumption | | | 100 mA or less (excluding external connection load) | | | | |
| Outputs | | | Semiconductor Photo-MOS relay output × 3 • Maximum load current: 100 mA • Applied voltage: 30 V DC or less (between output and +V) • Residual voltage: 1.5 V or less (at 100 mA of load current) | | | | |
| | Output operation | | Output 1 : When an object is detected (beam is interrupted): OFF / When an object is not detected (beam is received): ON Output 2, 3 : When an object is detected (beam is interrupted): ON / When an object is not detected (beam is received): OFF | | | | |
| | Short-circuit protection | | Incorporated | | | | |
| Response time | | | 100 ms or less when an object is detected, 50 ms or less when an object is not detected | | | | |
| Time-out function | | 1 | Switchable either effective or ineffective by short-circuiting terminals (disabled when short-circuited) | | | | |
| Exte | ernal input | | 0 to 1 V or 10 V to +V: Valid (External input indicator lights up), 4 to 6 V or Open: Invalid (External input indicator lights off) | | | | |
| | Power indicator (POWER) | | Green LED (lights up when the power is ON) | | | | |
| ors | Operation indicator (OPE.) | | Green LED (lights up when an object is detected) | | | | |
| Indicators | External input indicator 1 | | Green LED (lights up when external input 1 is valid) | | | | |
| <u>ln</u> | External input indicator 2 | | Orange LED (lights up when external input 2 is valid) | | | | |
| | Fault indicator (FAULT) | | Yellow LED (blinks or lights up when fault occurs) | | | | |
| | Protection | | IP65 (IEC), TYPE 1 (UL 50) (excluding terminal part) | | | | |
| ance | Ambient temperature | | -25 to +50 °C −13 to +122 °F (No dew condensation or icing allowed), Storage: -30 to +70 °C −22 to +158 °F | | | | |
| Environmental resistance | Ambient humidity | | 30 to 85 % RH, Storage: 30 to 85 % RH | | | | |
| a E | Ambient illuminance | | Incandescent light: 3,000 ℓx at the light-receiving face | | | | |
| nent | Voltage withstandability | | 1,000 V AC for one min. between all supply terminals connected together and enclosure | | | | |
| ronr | Insulation resistance | | 20 $M\Omega$, or more, with 500 V DC megger between all supply terminals connected together and enclosure | | | | |
| Envi | Vibration resistance | | 10 to 500 Hz frequency, 3 mm 0.118 in amplitude in X, Y and Z directions for two hours each 10 to 150 Hz frequency, 0.75 mm 0.030 in amplitude in X, Y and Z directions for two hours each | | | | |
| | Shock resistance | | 500 m/s ² acceleration (50 G approx.) in X, Y and Z directions for three times each | | | | |
| Ren | novable-type | Connector | 3.5 mm 0.138 in pitch, | 2-level socket: 12 pins | | | |
| | ninals | Terminal part | 3.5 mm 0.138 in pitch spring-cage terminals: 6 pins \times 2 | (FMC1,5 / 6-ST-3,5 manufactured by Phoenix Contact) | | | |
| Cable | | | 0.2 to 1.5 mm ² [including single wire or ferrule (sleeve)] | | | | |
| Maximum cable length | | | Up to 20 m 65.617 ft (for cable from 0.2 to 0.3 mm²), Up to 100 m 328.084 ft (for cable from 0.3 to 1.5 mm²) | | | | |
| Material | | | Enclosure: Polycarbonate, Polyester, O-ring: Silicone rubber, Mounting nut: PBT, Mounting packing: Silicone rubber | | | | |
| Weight | | | Net weight: 130 g approx. Gross weight: 200 g approx. | Net weight: 150 g approx. Gross weight: 220 g approx. | | | |

I/O CIRCUIT AND WIRING DIAGRAMS


I/O circuit diagram

If case of connecting output to Minus common

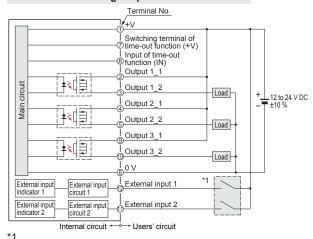




Terminal arrangement diagram



If case of connecting output to Plus common

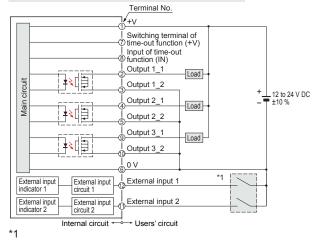

Non-voltage contact or NPN open-collector transistor

Contact "closed" or transistor "ON": Valid (External input indicator lights up) Contact "open" or transistor "OFF": Invalid (External input indicator lights off) FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Selection Guide Light Curtains Safety Components

Control Units

SW-100

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE

SENSORS

PARTICULAR SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE MENT SENSORS STATIO ELECTRICITY PREVENTION

DEVICES LASER MARKERS

PLC

HUMAN ENERGY CONSUMPTION VISUALIZATION COMPONENTS

COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Light Curtains

Control

SW-100

PRECAUTIONS FOR PROPER USE

• Never use this product in a device for personnel protection.

• In case of using devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

· Do not use this product as a device for emergency stop.

• This product is used to start up the machinery. Securing safety for the startup of machinery should be performed separately.



 When using the products for two-hand control, comply with the following contents.

 Select a model of a control device for two-hand control, based on results of risk

· Make sure to use a controller for two-hand control which complies with ISO 13851 (EN 574, JIS B 9712)

· For another requirements such as mounting of this product, or prevention of accidental actuation and of defeat etc., comply with ISO 13851 (EN 574, JIS B 9712) and ANSI B11.1, B11.9. Furthermore, comply with the regulations established by national or regional security committees (Occupational Safety and Health Administration: OSHA, the European Standardization Committee,


Mounting

· Fasten a mounting nut (accessory) from the reverse side of the mounting plate. (Note 1)

The tightening torque should be 2 to 3 N·m.

Notes: 1) A mounting tool (SW-MT1) for fastening the mounting nut is available separately. The shape of fastening part of SW-MT1 is M10 nut.

2) Make sure to use the attached mounting packing, or waterproof property will be invalid.

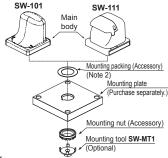


Time-out function

• Unintended beam interrupted status caused by dirt on the sensing surface, etc. can be monitored.

When beam interrupted status (sensing status) continues for 10 sec. or more, output 1 turns ON and output 2 and 3 turn OFF (output status is the same as non-sensing

This function can be invalid by short-circuiting "between switching terminals of time-out function (terminal No. 7 and No. 8)" as described below.

Note: When time-out function is operated, the fault indicator (yellow) lights up. In this case, once beam is received, the fault indicator lights off and the sensor returns to normal operation.

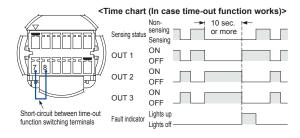

Others

- When the power of the thru-beam type photoelectric sensor inside the main body turns on in beam interrupted status, output 1 turns ON and output 2 and 3 turn OFF, then the fault indicator (yellow) lights up. In this case, once beam is received, the fault indicator lights off and the sensor returns to normal operation.
- Use a power supply unit conforming to the EMC Directive and the Low Voltage Directive. (Only for use in Europe)
- · Use a power supply unit conforming to Class 2. (Only for use in the North America)
- Use a power supply unit with an output holding time of 20 ms or more.
- · Do not use during the initial transient time (300 ms approx.) after the power supply is switched on.

DIMENSIONS (Unit: mm in)

Note: The panel thickness should

be 3 mm 0.118 in or less.

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

DEVICES LASER MARKERS

PLC

Optical touch switch

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE

VISION SYSTEMS

Selection Guide


Light Curtains Safety Component

Control Units

SW-100

The CAD data in the dimensions can be downloaded from our website.

SW-101 Optical touch switch

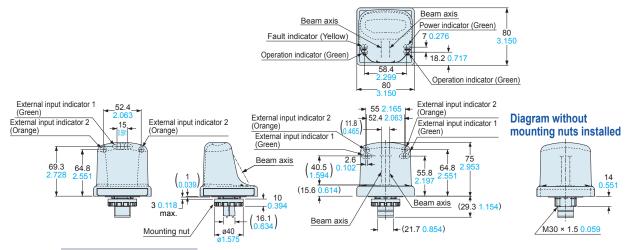


Panel cut-out dimensions


SW-111


<When mounting with a resin plate>

4.8




<When mounting with a metal plate>



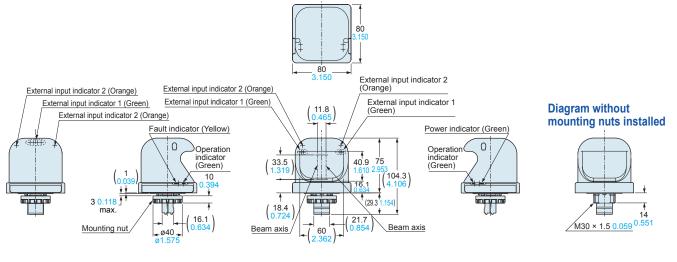


Panel cut-out dimensions

<When mounting with a resin plate>



<When mounting with a metal plate>



Note: The panel thickness should be 3 mm 0.118 in or less.