

Introduction

A table mounting clamp for parallel action hand crimp tools. This tool can only be used for the hand crimp tools shown on this document.

Mounting Procedure (Figure 1)

1. Attach the *Table Mounting Block* to the tool body with the *Fastening Knob* through the oval slot in the bottom of the tool head.
2. Slide the *Table Clamp* through the bottom ledge of the *Table Mounting Block* and adjust the *Table Clamp* to fit tightly.

NOTE: Maximum table/bench thickness = 50.00 mm [1.97"]

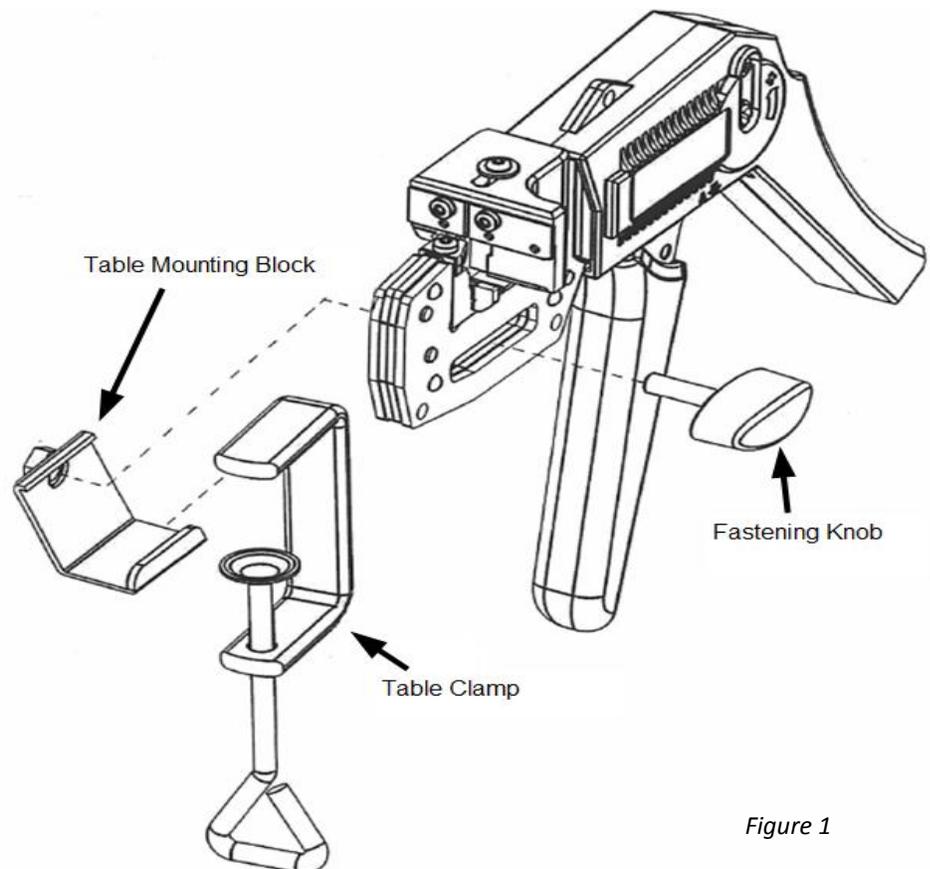


Figure 1